

Supplementary information relating to the users' manual Interfaces USB/RS232

English



Sach-Nr. 2 773 001 deutsch + english; 05/2011, Deutsch Originalsprache



Contents

1 General	4
1.1 Information about the operating instructions 1.2 Explanation of symbols	
2 Security	6
2.1 Security 2.2 Proper use of the interfaces	
3 Connection	7
4 Setting the additional function codes	
	8
5 Programming assistant	10
5.1 General	
5.3 Connecting the counter	
6 Configuring with the programming assistant	15
6.1 Writing and reading configuration data	
6.2 Configuring via USB stick	
7 Communication interface	19
7.1 Definition of the communication interface	
7.3 List of commands	
7.4 Syntax for read, write and function commands	
7.5 Command examples	
8 Technical data	26
9 Ordering information	28
10 Accessories	29

1 General

1 General

1.1 Information about the operating instructions

These operating instructions are intended to supplement the operating instructions 2772083 for 0773xxx and 0774xxx counters, and describe the additional functions of the USB and RS232 interfaces. They contain important information for working with the multifunctional counter. Operating instructions 2772083 form an integral part of these operating instructions and must be observed in full. This applies particularly to the section on security. Compliance with all of the security information and procedural instructions is essential to ensure work safety.

Information about liability restrictions, copyright protection, warranty provisions and customer service can be found in the operating instructions 2772083.

1.2 Explanation of symbols Warnings

Symbols are used to denote warnings in these operating instructions. These warnings are introduced by signal words that describe the magnitude of the risk. Observance of these warnings is absolutely compulsory, and due caution must be exercised at all times to prevent accidents, injury and property damage.



Danger!

Indicates an immediate threat that will result in death or severe injury if not avoided.



Warning!

Indicates a possibly dangerous situation that can result in death or severe injury if not avoided.

Caution!

Indicates a possibly dangerous situation that can result in minor injury if not avoided.



Note!

Indicates a possibly dangerous situation that can result in property or environmental damage if not avoided.



Tips and recommendations

Highlights useful tips and recommendation, together with information for efficient, trouble-free operation.

2 Security

2 Security

2.1 Security

Operating instructions 2772083 form an integral part of these operating instructions and must be observed in full. They contain safety warnings and procedural instructions for the multifunction counter. These operating instructions address additional security aspects relating to the USB and RS232 interfaces.



Ignoring the procedural instructions and safety information in these instructions could produce extremely dangerous situations.



Warning!

Danger from ignoring the safety information! Any non-compliance with the safety information, and specifically with the warnings in operating instructions 2772083, can produce dangerous situations.

2.2 Proper use of the interfaces

The interfaces can be used to configure the counter, read out or overwrite values, and perform functions. Values can be read out at any time. Values may only be overwritten or functions performed when the machine is stationary. If and to the extent that values have to be overwritten or functions performed during the process flow, the manufacturer of the control unit must ensure that these actions do not pose any risks for people or property



Danger!

Writing values and performing functions during an ongoing process can produce dangerous situations.

3 Connection



USB

If both USB connectors on the counter are occupied, the host (USB cable) takes precedence. The drive (USB stick) is automatically deactivated in such cases.



(factory setting)

4 Setting the additional function codes

These function codes apply for all basic functions, over and above the operating instructions 2772083. The factory setting is compulsory when using the USB stick and/or working with the programming assistant.

Programming mode	Change function settings:	Save, move to next function:	Return to display mode:
E + 🔽	0.		Ε
Keep pressed and turn on the voltage at the same time	press	press	press
Alternative display of function codes	+	The function codes are displayed in text form in row 1. Press both keys simultaneously to switch to numerical display F 0 to F 35. Press again to display the number of the selection options as well. These settings are saved.	

Function code F24, Display, row 1: 8 8 8 8 8

Function	No.	Display, row 2	
Baud rate	0	8.8.8.2.0.0	1200
Interface	1	8.8.2.4.0.0	2400
	2	8.8.9.8.0.0	4800
	3	8.8.9.6.0.0	9600
	4	8.888.00	19200
	5*	88408	38400
Function o	ode F2	25, Display, row	1:886889
Parity	0	8.8.8.8.8.8.	none
	1*	8. 8. 8. 8. 8. 8 .	even
	2	8.8.8.8.8.8.8	odd
Function c	ode F2	26, Display, row	1:588888
Stop bit	0	8.8.8.8.8.8.	1 Stop bit
	1*	8.8.8.8.8.8.	2 Stop bits

5 Programming assistant

5.1 Programming assistant, general

Having decided to buy a tico counter with interface, you now have the option of using our programming assistant to quickly program the counter. You can download the assistant free of charge from our home page at www.hengstler.com or www.tico-counter.com.

You must install Microsoft .Net Frame Work 3.5 before you can use the programming assistant. The needed files are part of the installation file.

Depending on the version, the counter can be connected to a PC and programmed using a USB or RS232 cable, the USB version of the counter can also be programmed using a USB stick. The program can be used, both to transfer the programming to the counter, and to read out the counter's current programming.

The programming assistant maps all of the function codes and their values that are also set in the counter. The clear structuring of the screen allows you to save considerable time compared with conventional programming using the counter keypad.

In addition, the program offers various help functions to aid you in correctly programming your counter.

Apart from help texts, you will also find preset programs for standard applications, which you can simply adjust to your specific application.

In addition to easily programming the counter, you also have the option to archive your various program settings in electronic or hard copy format.

Linking the program settings to the serial number of the counter allows you to avoid mistakenly using the wrong program settings when operating several counters.

So why not visit our home page now (www.hengstler.com or www.tico-counter.com) and download your free copy of the programming assistant.

5.2 Installing the programming assistant



When you start installing the program, it will first check whether you have installed .Net Framework. If not, you will see the following message: To install . Net Framework please accept the license terms. Once you have read through the terms carefully, please click on Accept. .Net Framework is then installed automatically, you do not need to do anything else. Once the installation is complete, you will see the following window:



Please click "Next" to start the installation.

elect Inst	allation Folder	
he installer will ins	stall Tico77x Product Configurator to the following fo	lder.
o install in this fol	der, click "Next". To install to a different folder, enter	it below or click "Browse"
Eolder:		
C:\Programme	Hengstler\Tico77x Product Configurator\	Browse
		Disk Cost

Use the "Browse..." button to select the installation path. Once you are happy with the installation path, click "Next".

Next >

You will be asked again if you really want to install the program; confirm by clicking "Next" again to start the installation.

Installation has been successfully completed if you see this window. You can now connect your counter and start programming.

i Tico77x Product Configurator	
Installation Complete	
Tico77×Product Configurator has been successfully installed.	
Click "Close" to exit.	
Please use Windows Update to check for any critical updates to the .NET Framework	ık.
Cancel K Back	Close

5.3 Counter connection

Once you have installed the programming assistant, you can connect the counter to the computer for installation purposes. The following window should appear about 10 seconds after connecting the counter by USB. Click "Yes, just this once" and then "Next" to start driver installation.





Then click "Automatically install software (recommended)", followed by "Next".



The necessary drivers will then be installed.



Installation is complete; you can click "Finish" and start setting your counter with the aid of the programming assistant.

6 Configuring with the programming assistant6.1 Writing and reading configuration data

COM4 *	
38400 *	
	COM4 *

The counter can be programmed straight from a computer using the programming assistant. The counter must be connected to the computer. Click the button "Begin transfer" in the File/Transfer menu to transfer the configuration data to the counter. Click the button "Read" to read out the configuration data on the computer.

6.2 Configuring via USB stick

The USB stick can contain one global file or any number of individual configuration files. Any counter can be programmed with a global configuration file, whereas single files can only be used for the counter with the matching serial number. The files must be stored in the "tico" folder on the stick.

If the USB stick is inserted or if the voltage is turned on when the USB stick is inserted, the counter automatically starts configuring and looks for configuration files. The display first shows: USB search, followed by USB Single or USB Global. Single or Global are displayed for about 10s. If E is pressed on the keyboard during this period, the new configuration file is read and saved. The display then shows USB Config followed by USB done.

If E is not pressed within 10s, the configuration is aborted, the previous configuration remains active and the display shows USB abort.

6.3 Text messages

Description of the text messages generated by the USB interface on the counter.

USB SEArCH	Searching drive Once a USB drive is inserted, it is checked for the existence of the "tico" directory and the configuration file(s) in the direc- tory. • Global file: T_000000.CFG (irrespective of serial number) • Single file: T_003231.CFG (only for use with the counter bearing serial number 3231)
USB no dir	No directory found The interface has not found a directory called "tico". The con- figuration process has been aborted. The display returns to standard view after a couple of seconds.

USB noFILE	No file found Neither a global nor single configuration file has been found. The configuration process has been aborted. The display re- turns to standard view after a couple of seconds.		
LISB	Global configuration file found		
GLObAL	A global configuration file has been found. Press "E" to con- firm and start the configuration process. Press any other key to abort the process. If no keys are pressed within 10 seconds, the process is, again, automatically aborted.		
LICR	Single configuration file found		
SInGLE	A single configuration file has been found. Press "E" to confirm and start the configuration process. Press any other key to abort the process. If no keys are pressed within 10 seconds, the process is, again, automatically aborted.		
	Counter is being configured		
COnFIG	The counter is configured using the file it has found.		
USB	No configuration command executed		
no CFG	A configuration file has been found and the configuration started, but no command has been executed. Very probably, the file does not contain any configuration commands (com- ments not excluded).		
LISR	Configuration complete		
donE	The configuration was completed without error. In order to re- configure the counter, remove the USB drive and insert again.		
	Frror 1: Drive was removed before configuration started		
USB E1	A configuration file was found, but the interface could no lon- ger detect a drive when the configuration process was started manually. The process is aborted and a restart prevented since no configuration has taken place. The display returns to stan- dard view after a couple of seconds.		

6 Configuring with the programming assistant

rESEt	Error 2: Drive was removed during the configuration pro- cess		
E2	The USB drive was removed during configuration. The process is aborted. The counter must be restarted to reset any possible errors in the configuration. This is shown by the message "rE- SEt" on the display. Press any key on the counter to restart it. In order to reconfigure the counter, remove the USB drive and insert again.		
rESEt	Error 3: A configuration command has produced an error message		
E3 AAA	A command error has occurred during configuration of the counter, i.e., one of the commands in the configuration file reported an error. The digits shown here as XXX (e.g., 014) refer to the command error in the configuration file. It represents the sequential number of the executed commands, not the row number. Example: If error "14" is displayed, the error is contained in the 14th command in the configuration file, irrespective of how many comments are noted.		
USB	Configuration has been aborted		
Abort	This message appears in the display if the configuration pro- cess is not started within the specified time after finding the configuration file, or if the process is manually aborted. The display returns to standard view after a couple of seconds.		

7.1 Definition of the communication interface

Generic Interface for tico 77x

General:

Explanation of the term "Generic Interface"

The generic interface provides basic functions for reading/writing counter values and function settings to/from the counter. An ASCII protocol is used for communication, but other, higher protocols can be set. This documentation describes the functionality of the generic interface between the counter and the interface PCB.

Following is only an overview of the generic interface. For detailed view, please visit our webpage www.hengstler.com or www.tico-counter.com.

Hardware protocol: The generic interface is based on RS232.

Baud rate: 38.4 kBd Bits: 8 Parity: even Stop bits: 1 Software protocol:

The generic interface between tico77x and the interface PCB is based on ASCII commands and data values in ASCII format.

The internal counter structure of the values is binary and optimized for high counting speeds. The values exchanged via the generic interface are ASCII values. The counter converts the values into its internal format.

7.2 Overview of generic interface functions:

Basic functions:

- 1. Read / write the basic counter functions
- 2. Read / write the function codes
- 3. Read / write the USER monolayer times

Read / write values:

- 1. Read / write the preset values
- 2. Read / write the prescaler value
- 3. Read / write the counter values
- 4. Read the tachometer value

Special functions:

- 1. Reset the counting values
- 2. Reset the counter
- 3. Activate/deactivate status reports (changes in preset status)
- 4. Read the software version
- 5. Read the software number
- 6. Save all values to the EEPROM
- 7. Direct access to the display, e.g., for messages

7.3 List of commands:

Command	R / W / F	Value	Description
BFN	R/W	04	Set the basic function
F00	W	0/1	Set the default values
F01	R / W	See Manual	Function code 1 (FO1)
::	R / W	::	::
F35	R / W	::	Function code 35 (F35)
UT1	R / W	000.01 to 599.99	Output user monolayer time 1

UT2	R / W	000.01 to 599.99	Output user monolayer time 2
UT3	R / W	000.01 to 599.99	Output user monolayer time 3
PRO	R / W	-99999999999999	Value for preselect 0
PR1	R / W	-9999999999999	Value for preselect 1
PR2	R / W	-999999999999	Value for preselect 2
PSC	R / W	000001 999999	Prescaler value
CNT	R / W	-9999999 999999	Counting value
TAV	R	-9999999 999999	Tachometer value
TOT	R / W	000000 999999	Totalizer
BAT	R / W	000000 999999	Batch counter
SU1	R / W	000000 999999	Sub-total 1
SU2	R / W	000000 999999	Sub-total 2
SWR	R	YYYY	Software version
SWP	R	XXXXXX	Software number
SNR	R	XXXXXX	Counter serial number
OST	R	XYZ	Starting status X,Y,Z = P0,P1,P2
RST	F		Reset counter device
RSC	F		Reset counting values
MON	F		Output monitoring ON
MOF	F		Output monitoring OFF
STV	F		Save values to EEPROM
NOP	F		No function
PNG	F		Ping ->response = "TICO 772"

CSE	F		Checksum enable
CSD	F		Checksum disable
BLI	R / W	0 15	Brightness setting for display illumination
REM	W	099	Function for display access
WFK	W	099	Wait for key to be pressed by operator
D00	W	0 255	Delete display when ac- cessing display
D01-D15	W	0 255	Write sample to display

R = ReadW = Write

F = Function

7.4 Syntax for read, write and function commands

Syntax for read commands:

The commands are comprised of the command name (3 characters) followed by a space and the code for read ("R"). The command ends with CR (0Dh). (0Dh)

C M D	R	CR
-------	---	----

The counter responds by repeating the command name and indicates the return value, separated by a space. The response ends with CR

с	М	D	_	1	2	3	4	5	6	CR

Unknown (incorrect) commands generate the following response:

|--|

Syntax for write commands:

The commands are comprised of the command name (3 characters) followed by a space and the code for write ("W") and the value to be written, which consists of up to 6 digits and the algebraic sign. The command ends with CR (0Dh).

С	М	D		w		-	1	2	3	4	5	6	CR
---	---	---	--	---	--	---	---	---	---	---	---	---	----

The counter responds by repeating the name of the command, followed by "OK" if the command has been executed or "ER" if the command could not be executed, e.g., because of an invalid value. The response ends with CR.

Command has been executed:

Command error:

C M D	E R CR
-------	--------

Syntax for function commands:

Function commands are commands for calling up functions within the counter, without reading or writing values.

С	М	D	CR
---	---	---	----

Response:

Command has been executed:

C M D	0	к	CR
-------	---	---	----

Command error:

C M D	E	R	CR
-------	---	---	----

7.5 Sequence for setting and altering

Sequence for setting values

Some values / settings can be transferred whenever you like, others require adherence to a specific sequence.

1. If the basic function of the counter is altered, the default values assigned to the basic function are automatically loaded. As such, function codes must always be changed after altering the basic function. Otherwise the counter will overwrite the changes made to the function codes.

2. All counting values are automatically deleted if the prescaler is altered. So changes to the prescaler must always be made before altering the counting values.

3. Initially, all values are altered only in the working memory. Once the values have been transferred, they must be saved to the EEPROM using the STV command. Changes to function codes do not become effective until the counter has been restarted/reset ("RST").

The following sequence should be adhered to when changing values:

- Set basic function (BFN)
- Set default values (FOO)
- Set function codes (F01 ... F35)
- Save values to EEPROM (STV)
- Reset/restart counter to activate the changes (RST)
- Set the prescaler (PSC)
- Set the preselect values (PR0 .. PR2)
- Set the counting values (CNT, TOT, SU1, SU2)
- Save all values to EEPROM (STV)

Any function not mentioned here does not have to adhere to a specific sequence. All read functions can be used at any time.

8 Technical data

These operating instructions only contain the supplementary technical data for the interfaces. Further technical data can be found in the operating instructions 2772083.

RS-232 interface (Tico 774)	Also known as EIA-232, it is one of the stan- dards for serial interfaces.
Socket on the counter:	Micro Fit 3.0 from Molex, 3-pin
Data cable:	Micro Fit 3.0 socket to 9-pin D-Sub connector (S/UTP CAT-5 cable)
Cable length:	max.15 m
Baud rate:	38.400 baud / Parity: even / 8 bit / Stop bits: 1 (factory setting, see section 4 for setting options)
USB interface (Tico 773)	The Universal Serial Bus (USB 2.0) is a serial bus system for connecting external appliances during operation.
USB interface (Tico 773) Socket on the counter:	The Universal Serial Bus (USB 2.0) is a serial bus system for connecting external appliances during operation. for USB stick: Type A for USB stick: Type Mini AB
USB interface (Tico 773) Socket on the counter: Data cable:	The Universal Serial Bus (USB 2.0) is a serial bus system for connecting external appliances during operation. for USB stick: Type A for USB stick: Type Mini AB A connector to B-Mini connector, 5-pin

9 Ordering information

-		USB	USB
Display	Relay	12 - 30 VDC	100 - 240 VAC
LCD reflective	1	0 773 101	0 773 141
LCD reflective	2	0 773 102	0 773 142
LCD transmissive white	1	0 773 301	0 773 341
LCD transmissive white	2	0 773 302	0 773 342
LCD transmissive red	1	0 773 401	0 773 441
LCD transmissive red	2	0 733 402	0 773 442
LCD transmissive green	1	0 773 501	0 733 541
LCD transmissive green	2	0 773 502	0 773 542
		RS232	RS232
Display	Relay	12 -30 VDC	100 - 240 VAC
LCD reflective	1	0 774 101	0 774 141
LCD reflective	2	0 774 102	0 774 142
LCD transmissive white	1	0 774 301	0 774 341
LCD transmissive white	2	0 774 302	0 774 342
LCD transmissive red	1	0 774 401	0 774 441
LCD transmissive red	2	0 774 402	0 774 442
LCD transmissive green	1	0 774 501	0 774 541
LCD transmissive green	2	0 774 502	0 774 542

Reflective: Black digits, light reflection background Transflective positive: Black digits, illuminated background Transmissive white: White lit digits, black background Transmissive red: Red lit digits, black background Transmissive green: Green lit digits, black background

9 Ordering information

10 Accessories

Accessories

USB cable, ASS 3953 CA / 1.5 m	3 539 835
"USB stick 2.0 - 2GB (includes the soft- ware for the programming assistant)"	3 539 839
Cable RS232 3m	1 774 001
Cable RS232 5m	1 774 002
Cable RS232 10m	1 774 003
Cable RS232 15m	1 774 004

