



CAUTION:



Output will be active on application of air if pre-set value has been reached.

NOTES:

- Clean dry non-lubricated air to be used.
- Counters should never be adjusted while in operation.
- Pressures should not exceed counter specification.

These circuits have been designed as a concept/theory only. It is your responsibility to ensure that these details comply with all safety standards and regulations. We cannot accept responsibility for its application. Pneumatic cylinders have been used to illustrate output functionality only. Schematic diagrams shown here may vary from actual parts supplied, although functionality will remain the same.

Impulse Automation Limited	Date: 13th May 2014 Document: DWG002	REVISION					4				
							Author: Robert Dunn				
Title: Pneumatic Batch Counting Circuits											
											www.impulseautomation.co.uk sales@impulseautomation.co.uk