

CAUTION:



If start button held on after counter reaches its pre-set value the output will be activated. Upon applying air system may start automatically.

NOTES:

Clean dry non-lubricated air to be used.

Timers should never be adjusted while in operation.

Pressures should not exceed timer specification.

These circuits have been designed as a concept/theory only. It is your responsibility to ensure that these details comply will all safety standards and regulations. We cannot accept responsibility for its application. Schematic diagrams shown here may vary from actual parts supplied, although functionality will remain the same.

Impulse Automation Limited	Date: 13 May 2014	REVISION	3						
Document: DWG005			Author: Robert Dunn						
Title: Pneumatic Timing Circuit with Predetermined Counting and Automatic Stop www.impulseautomation.co.uk sales@impulseautomation.co.uk			impulse Automation						